

REDBACK® A 2074 Remote Alert/Evac Unit

OPERATING INSTRUCTIONS



OVERVIEW

Allows the A 2075 alert/evac unit to be controlled remotely. Featuring alert, evacuation, bell and cancel buttons. Can be located up to 100m away from the A 2075 unit. Connection is via multiple core cabling for your convenience.

OPERATION NOTES

- The remote unit will not operate properly if any of the 24V switched outputs (this includes the Alert and Evac 24V switched outputs) on the A 2075 are in failsafe mode.
- The remote unit will only trigger the A 2075 when the A 2075 is in auto mode. (The key switch on the front of the A 2075 must be in the auto position.)
- When the A 2075 is in manual mode the Alert and Evac switches on the remote unit will only illuminate when the respective Alert and Evac switches on the A 2075 are pressed. If the Alert and Evac switches on the A 2074 are pressed while the A 2075 is in manual mode nothing will happen.
- The chime switch on the remote unit will operate when the A 2075 is in manual or auto mode. However if the A 2075 is in manual mode and the chime switch on the A 2075 is pressed the corresponding light on the remote unit chime switch, will not light.

TROUBLESHOOTING

Alert and Evac lights illuminate when A 2075 switched on.

Check that all switched outputs on A 2075 are in normal mode of operation.

Check wiring between A 2074 and A 2075.

Distributed by Altronic Distributors Pty. Ltd. Perth. Western Australia.

Phone: 1300 780 999 Fax: 1300 790 999

Internet: www.altronics.com.au

